

Solaris Touch Screen Drivers:

Sparc

Surface Acoustic Wave:

SOL2-7-S-WS

- Solaris 7 Surface Acoustic Wave with a Serial Connection

SOL2-8-S-WS

- Solaris 8 Surface Acoustic Wave with a Serial Connection

SOL2-9-S-WS

- Solaris 9 Surface Acoustic Wave with a Serial Connection

SOL2-10-S-WS

- Solaris 10 Surface Acoustic Wave with a Serial Connection

Capacitive:

SOL2-8-C-WS

- Solaris 8 Capacitive with a Serial Connection

SOL2-9-C-WS

- Solaris 9 Capacitive with a Serial Connection

SOL2-10-C-WS

- Solaris 10 Capacitive with a Serial Connection

SOL2-10-C-WS-USB

- Solaris 10 Capacitive with a USB Connection

Resistive:

SOL2-8-R-WS

- Solaris 8 Resistive with a Serial Connection

SOL2-9-R-WS

- Solaris 9 Resistive with a Serial Connection

SOL2-9-R-WS-USB

- Solaris 9 Resistive with a USB Connection

SOL2-10-R-WS

- Solaris 10 Resistive with a Serial Connection

Infrared:

SOL2-8-IR-WS

- Solaris 8 Infrared with a Serial Connection

X86

Surface Wave:

SOLX86-2-S-WS

- Solaris X86 Surface Acoustic Wave with a Serial Connection

SOLX86-2-S-U

- Solaris X86 Surface Acoustic Wave with a USB Connection

SOLX86-9-S-USB

- Solaris X86 9 Surface Acoustic Wave with a USB Connection

Capacitive:

SOLX86-2-C-WS

- Solaris X86 Capacitive with a Serial Connection

Resistive:

SOLX86-2-R-WS

- Solaris X86 Resistive with a Serial Connection

SOLX86-10-R-USB

- Solaris X86 10 Resistive with a USB Connection

CF Toughbooks:

SOLX86-8-CF29

- Solaris X86 8 for a CF29 Toughbook

SOLX86-10-CF29

- Solaris X86 10 for a CF29 Toughbook